


XL6 6-LED LIGHTHEAD

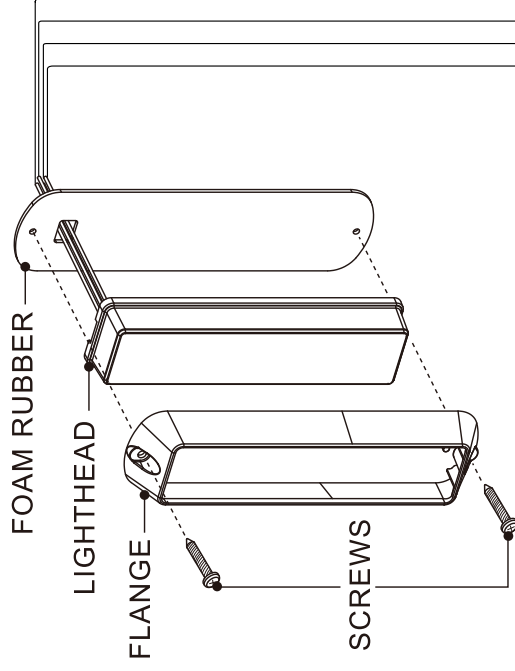

To +VDC (fuse @ 3A) ----- **RED**

To Chassis Ground ----- **BLACK**

For Simultaneous or Alternating Flash ----- **WHITE**

Group1 Heads: (Wiring- WHITE connected to RED) will flash together

Group2 Heads: (Wiring- WHITE not connected to RED) will flash together

Group1 Heads will alternate with Group2 Heads

For Synchronization & Flash Patterns ----- **YELLOW**

Connect YELLOW wires of all heads together for synchronization

*All heads must be set at the same pattern

FLASH PATTERN

- 0 Random (default)
- 1 Single (split)
- 2 Double (split)
- 3 Quad (split)
- 4 Quint (split)
- 5 Mega (split)
- 6 Ultra (split)
- 7 Single-Quad (split)
- 8 Single H/L (split)
- 9 Single (all)
- 10 Double (all)
- 11 Quad (all)
- 12 Quint (all)
- 13 Mega (all)
- 14 Ultra (all)
- 15 Single-Quad (all)
- 16 Single H/L (all)
- 17 Steady 2 (california)
- 18 Steady 4 (all)

Momentarily apply +VDC to **YELLOW** wire:

· once for next pattern

· quickly three times for reset

Note: This unit is not factory set at pattern 0