

## 4-LED LIGHTHEAD 12-24 VDC

### WIRING

**RED:** To +VDC (fuse @ 3A)

**BLACK:** To Chassis Ground

**WHITE:** For steady burn, apply +VDC

**YELLOW:** For Synchronization:  
Connect YELLOW wires of all heads together for synchronization  
(all heads must be set at the same pattern)

#### For Simultaneous or Alternating Flash:

1. Apply +VDC to RED and YELLOW wires simultaneously to enter

Grouping; lighthouse will display short (single or double) flashes:

- Single flash = Group1    · Double flash = Group2

2. Momentarily apply +VDC to YELLOW wire to change Groups:

- Heads in the same Group flash together.
- Group1 Heads alternate with Group2 Heads.


#### For Flash Patterns:

Momentarily apply +VDC to YELLOW wire:

- once for next pattern
- quickly three times for pattern (

### FLASH PATTERN

<b>0</b> Random	<b>10</b> Double (all)
<b>1</b> Single (split)	<b>11</b> Quad (all)
<b>2</b> Double (split)	<b>12</b> Quint (all)
<b>3</b> Quad (split)	<b>13</b> Mega (all)
<b>4</b> Quint (split)	<b>14</b> Ultra (all)
<b>5</b> Mega (split)	<b>15</b> Single-Quad (all)
<b>6</b> Ultra (split)	<b>16</b> Single H/L (all)
<b>7</b> Single-Quad (split)	<b>17</b> Steady (ca)
<b>8</b> Single H/L (split)	<b>18</b> Steady 4 (all)
<b>9</b> Single (all)	

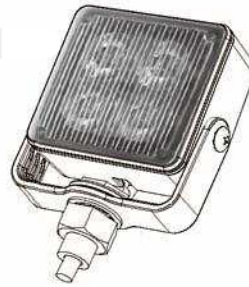

Note: This unit is not factory set at pattern 0